
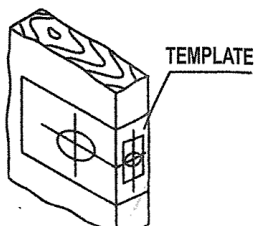
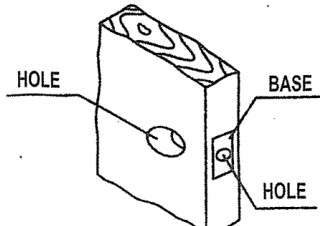
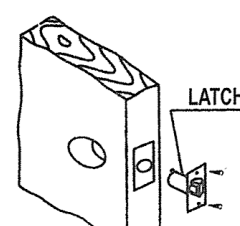
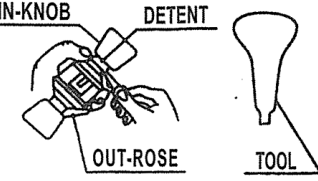
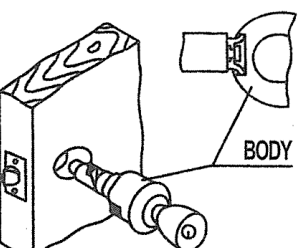
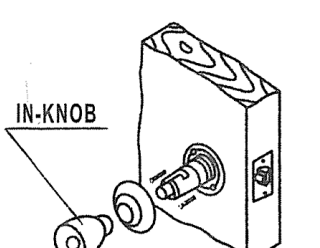
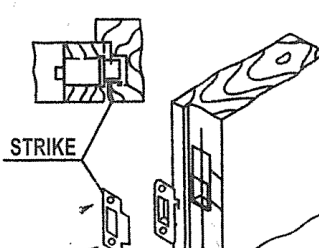


HÄFELE

HOW TO INSTALL THIS CYLINDRICAL LOCK

<p>① MARK DOOR</p>  <p>▶ Mark site of lock and bore.</p>	<p>② BORE HOLES</p>  <ul style="list-style-type: none"> • Bore the holes through door • Cut out base. 	<p>③ INSTALL LATCH</p> 	<p>④ REMOVE IN-KNOB</p>  <ul style="list-style-type: none"> • Press tool against the detent pull out in-knob • Rotates out-rose to be symmetrical about centre line of door thickness
<p>⑤ INSTALL BODY</p>  <p>rotates out-rose to make the latch link with the body dependably.</p>	<p>⑥ INSTALL IN-KNOB</p> 	<p>⑦ INSTALL STRIKE</p>  <p>Line of door thickness</p>	<p>DIRSECTION</p>  <p>If keyway downward, the method of adjust is described as below:</p> <ol style="list-style-type: none"> 1. Turning the knob counterclock until the detent was appeared. 2. Insert key and turning clockwise approximate 45°. 3. Press tool against the detent, pull out out-knob. 4. To install again.

